
Assembly instruction for insect screen type HP3-SOKKA-1 / SOKKA-4

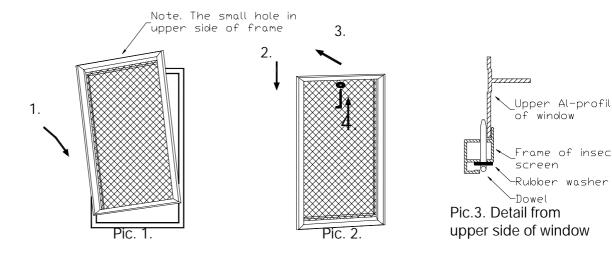

- 1. Open the existing window and place the insect screen to window as in picture 1.
- 2. Let the insect screen get down to the bottom profile of window. If necessary, mount two included screws to below of insect screen to stop falling down to the right level.
- 3. Push the upper edge of insect screen to its place in window (pic. 2.).
- 4. Place the rubber washer under the hole in upper side of frame as in picture 3. and push the dowel through of washer and upper profile of frame.

SOLAR- Insect screens has made by using weather proof material. Despite of this and to avoid any damages for insect screen, we recommend to remove the insect screen from window, outside of insect-season. (For example the birds can cause a damage for net)